


BINMASTER®

Taking Control . . . To A Higher Level

EXTERNAL MOUNTING INSTRUCTIONS

The **BinMaster Airpad Mounting Kit** eliminates the need to enter the bin to install or service air pads. By cutting a 2 5/8 x 6 3/8 hole in the bin wall, the airpad may be inserted and removed from outside the bin. First attach the mounting kit to the airpad as shown. Then insert the air pad/mounting kit assembly through the opening and lock into place with the spring steel clamp. This kit may be used for flat walled bins or round bins with at least a 3 ft. diameter. For smaller diameters additional gasket may be necessary.

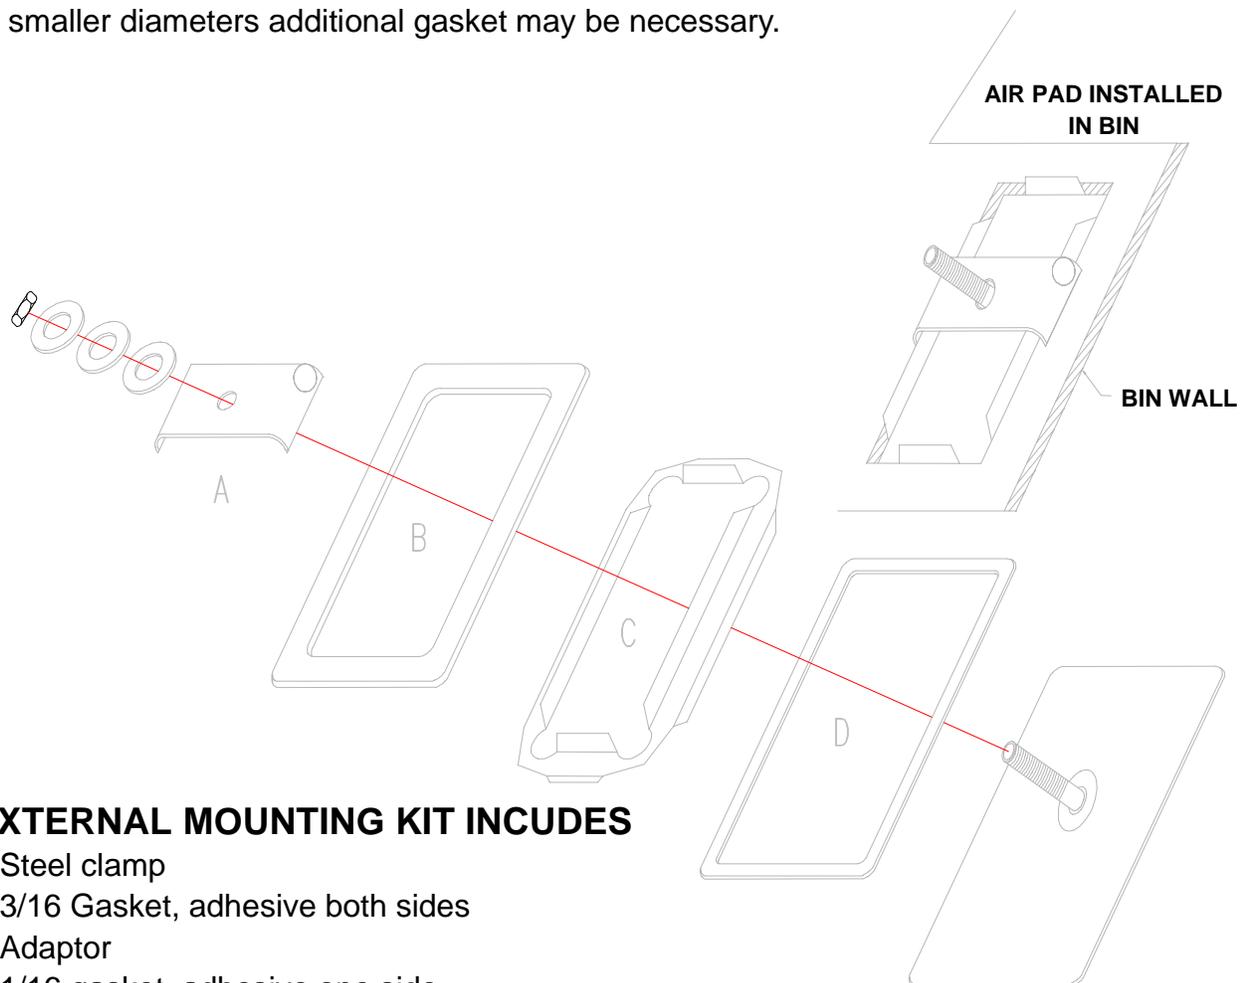

EXTERNAL MOUNTING KIT INCLUDES

1. Steel clamp
2. 3/16 Gasket, adhesive both sides
3. Adaptor
4. 1/16 gasket, adhesive one side

9270134.fm Distribué par :

HVS
PRECONISATEUR DE SOLUTIONS DEPUIS 1985

2 rue René Laennec 51500 Taissy France
Fax: 03 26 85 19 08, Tel : 03 26 82 49 29

Email : hvssystem@hvssystem.com
Site web : www.hvssystem.com